

# Included Items

**IMPORTANT**  
Read safety information in the Safety and Support manual before installing the PS3™ system.

## PlayStation®3 system



## AV cable



## AC power cord




## USB cable



## Quick Start Guide Safety and Support Manual

## DUALSHOCK®3 wireless controller

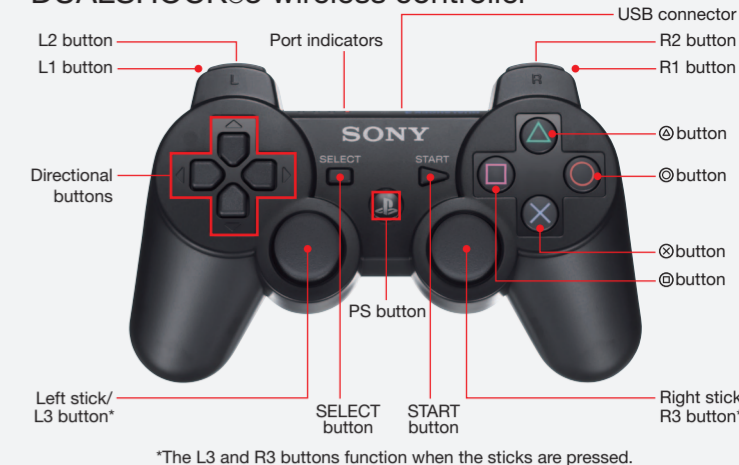


\*The L3 and R3 buttons function when the sticks are pressed.

# Install System

**HD Playback**  
Viewing an HD movie from a Blu-ray Disc™ requires an HDMI cable. For information about HDMI video output settings, visit: <http://us.playstation.com/support/>  
HDMI cable (sold separately) and compatible TV are required for High Definition output.




## Connect your PS3™ system to a TV

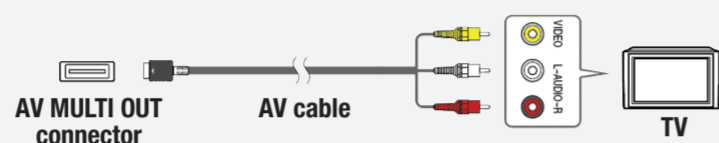


1. Connect the AV cable to the AV MULTI OUT connector on your PS3™ system and the corresponding colored inputs on your TV.
2. Turn on the TV and set the display to the appropriate input that the AV cable is connected to.

## Connect the AC power cord

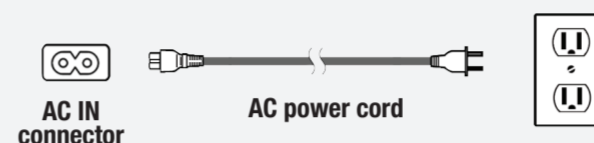

1. Connect the AC power cord to the AC IN connector on your PS3™ system and an electrical outlet.
2. Press the power button on your PS3™ system to turn the system on.

## Register (pair) the controller with your PS3™ system

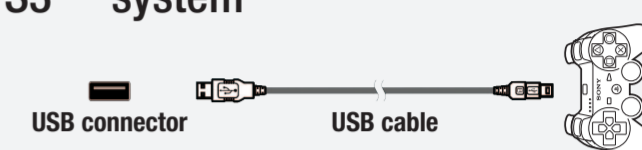

1. Connect the larger side of the USB cable to one of the USB connectors on your PS3™ system.
2. Connect the smaller side of the USB cable to the USB connector on the controller.
3. Press the PS button on the controller to pair it with your system.


# Initial Setup and Inserting Disc

## Perform initial setup



1. Follow the on-screen instructions to enter settings for system language, time zone, date and time, and user name.
2. When initial setup is complete, you will have the option to continue with Internet connection settings.


## Insert discs with the label side facing up

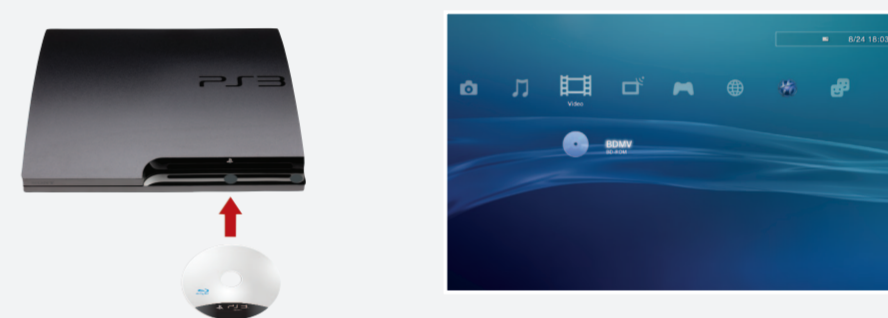

Use the directional buttons on the controller to navigate the XMB™ (CrossMediaBar) menu to locate inserted media.

# Internet Connection

## Wired Connection

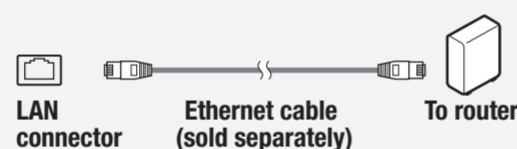


1. Connect an Ethernet cable to the LAN connector on the PS3™ system.
2. Select [Settings] → [Network Settings] → [Internet Connection Settings].
3. Select [Easy] and save settings.


## Wireless Connection



1. Select [Settings] → [Network Settings] → [Internet Connection Settings].

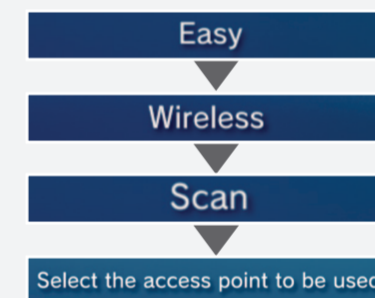

2. Select the items above.

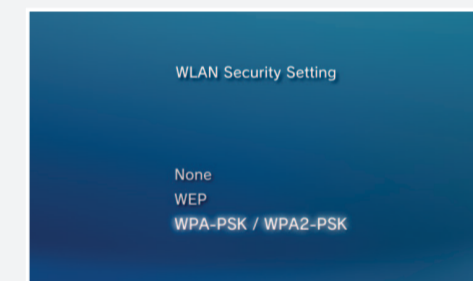

3. Select appropriate security settings.
4. Enter security key.
5. Save settings.

# PlayStation®Network Sign-Up


For free registration\*, begin by selecting [PlayStation®Network] on the XMB™ menu.




\*User is responsible for all applicable Internet fees. Some services or features may require additional fees. Registration is also possible via web browser at [www.us.playstation.com](http://www.us.playstation.com)



1. Choose [Create New Account].  
Select [Use Existing Account] if you already have a PlayStation®Network account.

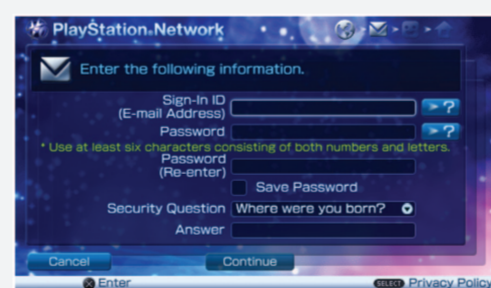

2. Enter required user information.

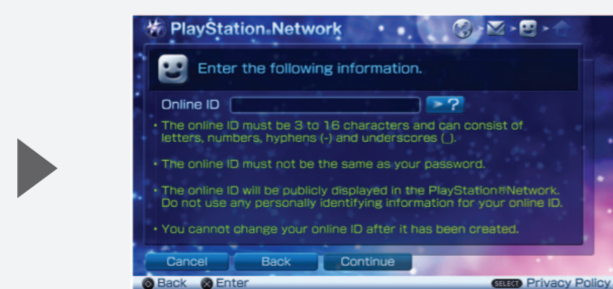

3. Create an Online ID for PlayStation®Network.



4. Visit PlayStation®Store!

# For More Information

**Advanced Quick Start Guide**  
[us.playstation.com/support/PS3qsg](http://us.playstation.com/support/PS3qsg)  
**Support Knowledge Center**  
[us.playstation.com/support](http://us.playstation.com/support)

**Online User's Guide**  
[manuals.playstation.net/document/](http://manuals.playstation.net/document/)

# Quick Start Guide / Guide de démarrage rapide



CECH-3001A  
CECH-3001B

4-291-323-11(1)

The examples shown are not representative of actual screens.

PS, PlayStation and DUALSHOCK are registered trademarks of Sony Computer Entertainment Inc. "P-3" and "PS" are trademarks of the same company. "XMB" and "cross media bar" are trademarks of Sony Corporation and Sony Computer Entertainment Inc. "SONY" and "PS" are registered trademarks of Sony Corporation. "Blu-ray Disc™" and "Blu-ray™" are trademarks of the Blu-ray Disc Association.

© 2011 Sony Computer Entertainment Inc. All rights reserved.



Printed in China  
Imprimé en Chine





# Éléments inclus

## IMPORTANT

Veillez lire les instructions de sécurité présentes dans le manuel de Sécurité et support technique avant d'installer le système PS3™.

### Système PlayStation®3



### Câble AV



### Cordon d'alimentation




### Câble USB



Guide de démarrage rapide  
Manuel "Sécurité et support technique"

### Manette sans fil DUALSHOCK®3

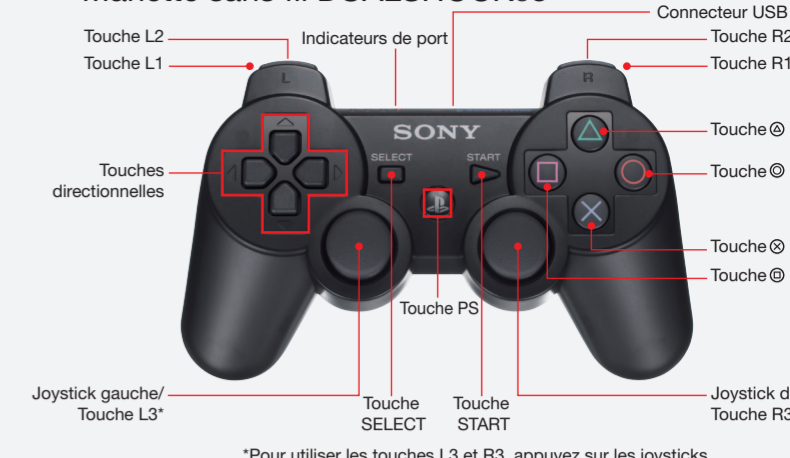

\*Pour utiliser les touches L3 et R3, appuyez sur les joysticks.

# Installation du système


## Lecture HD

La visualisation d'un film HD sur Blu-ray Disc™ nécessite un câble HDMI. Pour plus de détails sur les réglages de sortie vidéo HDMI, visitez : <http://us.playstation.com/support/>

Câble HDMI (vendu séparément) et téléviseur compatible requis pour une sortie en haute définition.



## Connexion du système PS3™ à un téléviseur

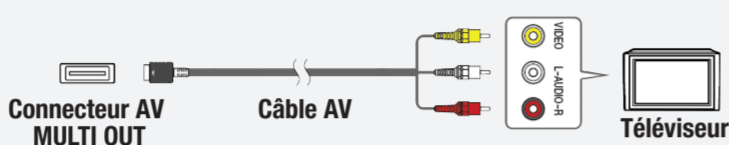


1. Connectez le câble AV standard fourni au connecteur AV MULTI OUT de votre système PS3™ et aux prises de couleur correspondantes sur votre téléviseur.
2. Allumez le téléviseur et réglez l'affichage sur l'entrée AV à laquelle le câble est connecté.

## Connexion du cordon d'alimentation



1. Connectez le cordon d'alimentation à la prise AC IN de votre système PS3™ et à une prise électrique.
2. Appuyez sur la touche d'alimentation de votre système PS3™ pour l'allumer.

## Enregistrement (association) de la manette avec votre système PS3™

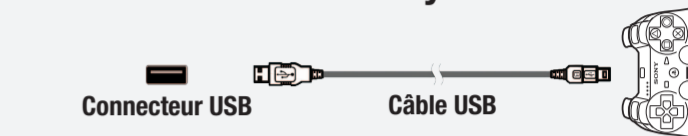

1. Connectez l'extrémité large du câble USB à l'un des connecteurs USB de votre système PS3™.
2. Connectez la petite extrémité du câble USB au connecteur USB de la manette.
3. Appuyez sur la touche PS de la manette pour associer cette dernière avec votre système.


# Configuration initiale et insertion d'un disque

## Configuration initiale



1. Suivez les instructions à l'écran pour sélectionner les paramètres du système (langue, fuseau horaire, date et heure, nom d'utilisateur).
2. Une fois la configuration initiale terminée, vous aurez l'option de configurer les paramètres de la connexion Internet.


## Insérez vos disques face imprimée vers le dessus.

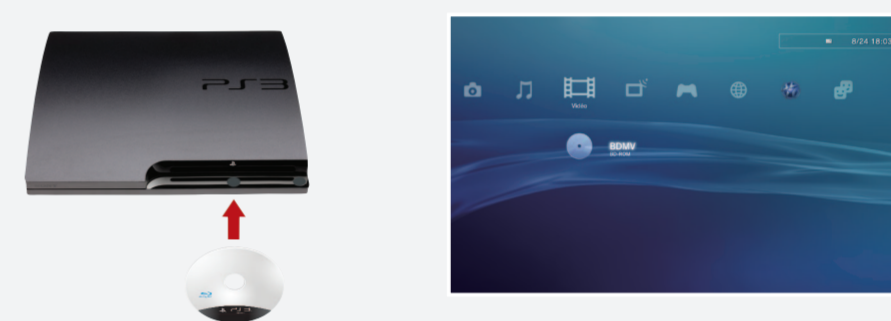

Utilisez les touches directionnelles pour naviguer dans le menu XMB™ (CrossMediaBar) jusqu'au support de stockage inséré.


# Connexion Internet

## Connexion par câble

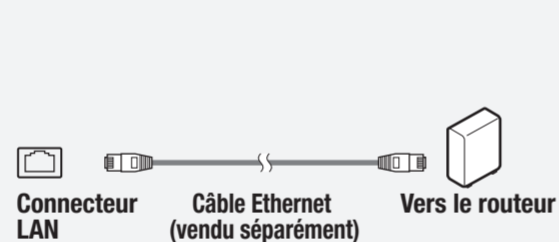


1. Connectez un câble Ethernet au connecteur LAN du système PS3™.
2. Sélectionnez [Paramètres] [Paramètres réseau] [Paramètres connexion Internet].
3. Sélectionnez [Facile] et sauvegardez les paramètres.


## Connexion sans fil

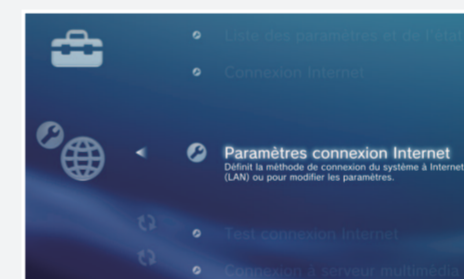

1. Sélectionnez [Paramètres] [Paramètres réseau] [Paramètres connexion Internet].

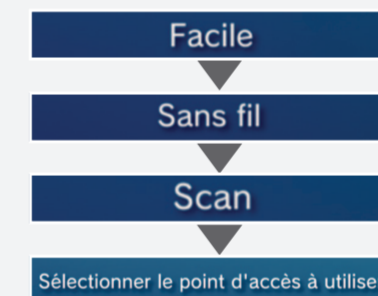

2. Sélectionnez les éléments ci-dessus.

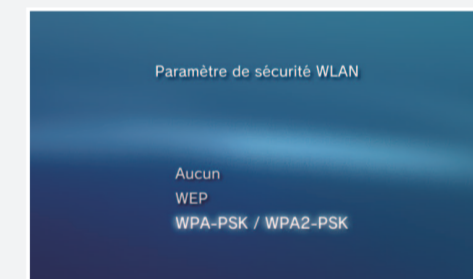


3. Choisissez les paramètres de sécurité appropriés.
4. Saisissez la clé de sécurité.
5. Sauvegardez les paramètres.

# PlayStation®Network Inscription


Pour créer un compte gratuit\*, commencez par sélectionner [PlayStation®Network] dans le menu XMB™.




\*Les frais Internet applicables sont à la charge de l'utilisateur. Certains services ou fonctionnalités peuvent engendrer des frais supplémentaires. Vous pouvez également vous inscrire via votre navigateur Internet sur [www.us.playstation.com](http://www.us.playstation.com).

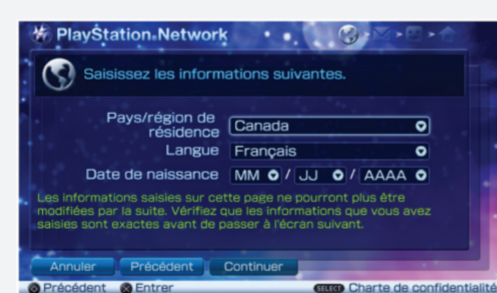

1. Sélectionnez [Créer un nouveau compte]. Sélectionnez [Utiliser un compte existant] si vous possédez déjà un compte PlayStation®Network.

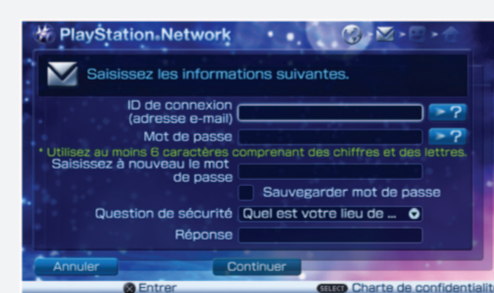

2. Saisissez les informations requises.

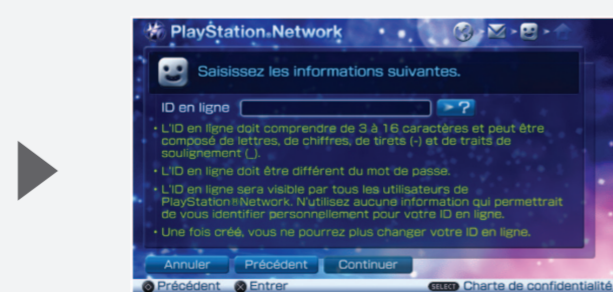

3. Créez un ID en ligne pour PlayStation®Network.



4. Visitez le PlayStation®Store !

# Pour plus d'informations

Guide de démarrage rapide avancé  
[us.playstation.com/support/PS3qsg](http://us.playstation.com/support/PS3qsg)

Support Knowledge Center (Centre de connaissances)  
[us.playstation.com/support](http://us.playstation.com/support)

Mode d'emploi  
[manuals.playstation.net/document/](http://manuals.playstation.net/document/)

# Quick Start Guide / Guide de démarrage rapide

